




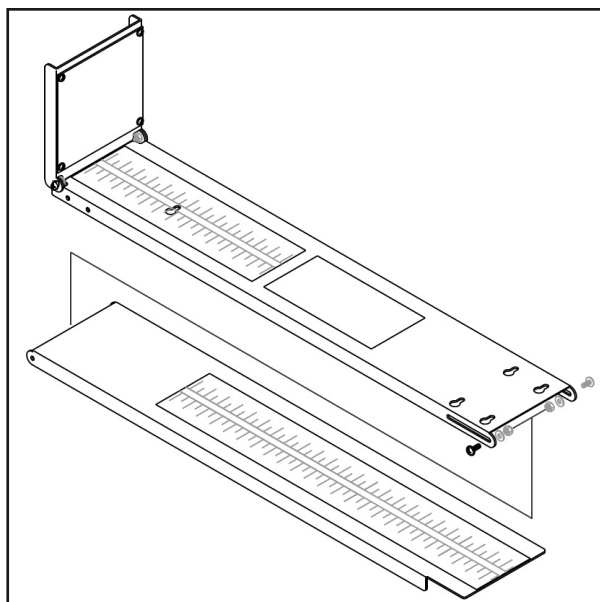


TO FOLD/UNFOLD THE RULER

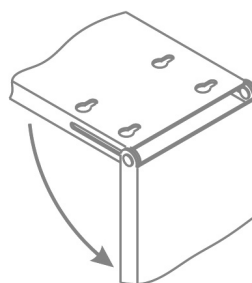

ROTATE 90°
UPWARD.

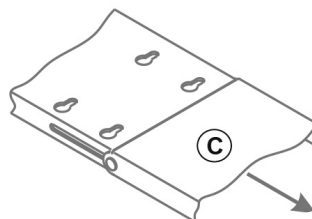

EXTENDED SECTION C
FULL OUTWARDS

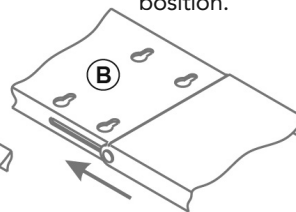

PUSH SECTION C OVER SECTION B
TILL IT LOCKS INTO POSITION

WARNING!

Be careful not to pinch fingers in hinge when folding or unfolding the frame.
Un-proper folding may damage the frame beyond repair.
Do not overload the frame when in the fully extended position.

TRIMMING SHAFT TO THE CORRECT PLAYING LENGTH:

STEP 1:

Lay shaft on the ruler with the tilt plate at right angle. Mark amount of shaft tip to be trimmed according to the manufacturer's instruction. Repeat for each shaft in the set.

STEP 2:

Trim shaft tips as indicated by the manufacturer.

STEP 3:

Assemble each shaft in its respective club head: (Dry Fit)

STEP 4:

Lay golf club on the shaft ruler and tilt the plate so that the club lies at the proper lie angle.

STEP 5:

Mark the shaft butt to the correct playing length. Ex: 44" long driver; mark shaft at 44", etc.

STEP 6:

Repeat for each club in the set taking care not to mix the shafts and heads.

STEP 7:

Butt trim the shafts accordingly.

STEP 8:

Repeat steps 3, 4 and 5 for each club to verify that the proper playing length was achieved for each club in the set.

