


MOUNTING:

1. Mount the GolfWorks Quick-Grip (GW1030) grip installer to a workbench using the included screws or to the Quick-Grip Vise Adaptor (GW1037) for use in a standard vise using the included bolts. If installing to a workbench the solvent relief stem should extend over the edge of the workbench.
2. Install the plastic tube over the solvent relief stem on the bottom of the Quick-Grip.

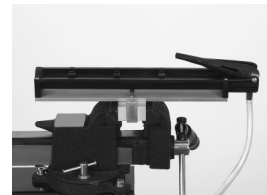

Quick Grip with Vise Adaptor

GRIPPING:



1. Apply build up tape if necessary and double coated tape to butt end of golf club.



2. Spray a small amount of solvent onto the fingers of the Quick-Grip grip installer fingers. This lubricates the grip installer fingers so that they will slide easily out of the grip once installed. This step does not need to be repeated if multiple grips are being installed.



3. Slide grip over the installer fingers.



4. Clamp the grip into the Quick-Grip clamps.




5. Align the grip so that the grip logo is pointed up. The logo can also be positioned pointed down if desired.




6. Spray solvent into the mouth of the grip. Solvent should be sprayed until a small amount of solvent starts to drip out of the grip to ensure the inside walls of the grip have been completely coated with solvent.



7. Spray solvent over the double coated tape on the butt end of the golf club until completely covered with solvent.

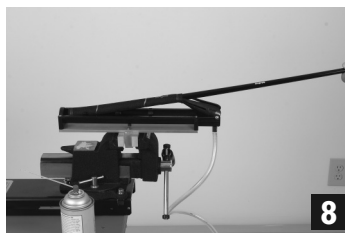

8. Holding the golf club head with the toe pointed up, firmly insert the butt end of the shaft into the Quick-Grip grip installer until the shaft contacts the back of the installer. If the grip was installed with the logo down than the club should be held with toe pointed down when installed.

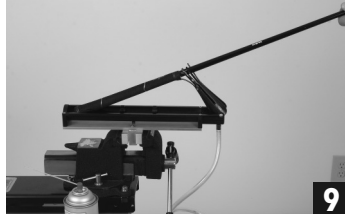

9. Keeping the butt end of the grip firmly against the back of the installer, lift the golf club head up until the installer fingers have been completely removed from the inside of the grip.



10. Remove the gripped club from the Quick-Grip grip installer.

NOTE: Quick-Grip will not install wrapped two piece synthetic grips that are secured by tape.