
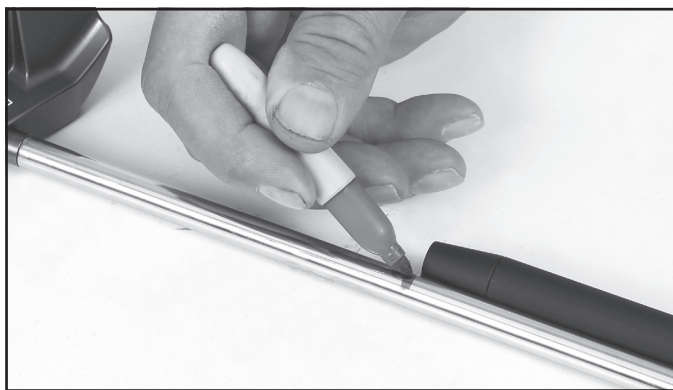


THE GOLFWORKS®

Installation Instructions For: Pure Track SS Putter Blank Code: MA0338

The Pure Track SS putter shaft blank can be retro fitted onto any type of installed putter shaft as long as the installed shaft has a .370" parallel section of approximately 2 3/4".

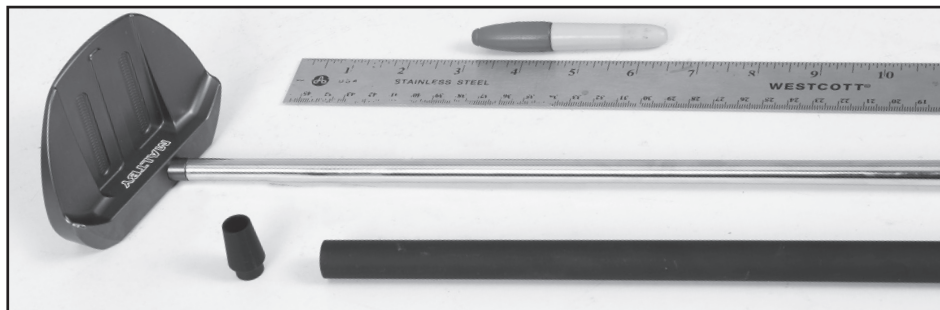


1. Align the Pure Track SS putter shaft next to the installed putter shaft in the desired position. Using a marker, place a mark on the installed putter shaft just below the Pure Track SS putter adaptor. *Note:* It is recommended that the Pure Track SS shaft be positioned between 5" and 6" from the bottom of the putter head.




2. Place a second mark 2 3/4" up the shaft. Cut the installed shaft off at this mark.



3. Abrade the installed shaft from the first mark to the end of the shaft. It is recommended to place a piece of masking tape over the first mark to prevent accidental over-abrading.

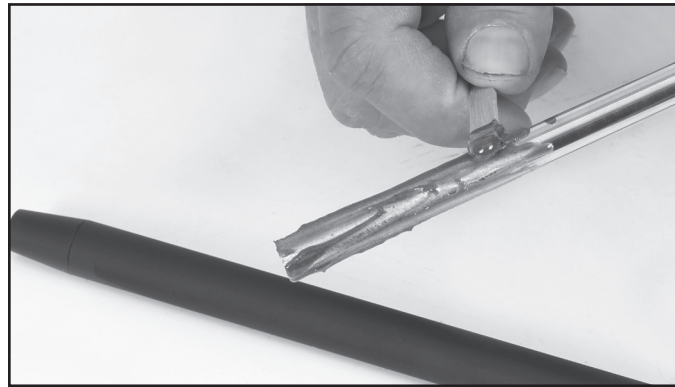

4. Apply a generous amount of shafting epoxy to the abraded section of the shaft tip and to the inside of the Pure Track SS putter shaft.

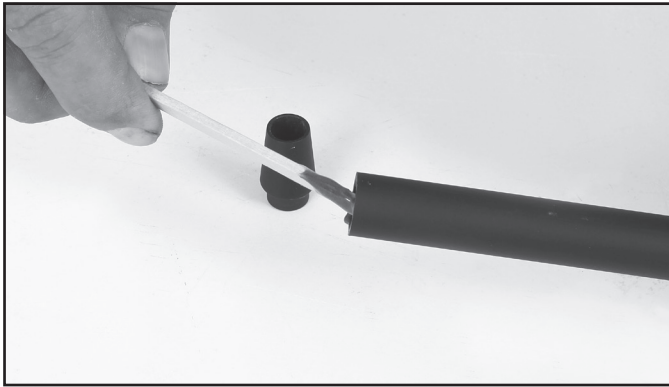

5. Apply a generous amount of shafting epoxy to the abraded section of the shaft tip and to the inside of the Pure Track SS putter shaft.



6. Insert the epoxy covered shaft into the aluminum adaptor and Pure Track SS shaft. Work the epoxy covered shaft tip in and out of the Pure Track SS blank and adaptor to ensure proper epoxy coverage.



7. Using a paper towel dampened with cleaning solvent, clean all excess epoxy from the retro fitted shaft. Let the putter sit in the playing position until the epoxy has dried.



8. Trim the putter to the desired playing length using a motorized cutting wheel or hacksaw and install the grip.