



1. Remove the protective material from the tip of the ProSoft Installation Tool.
2. Secure the golf shaft in a rubber bench vise or gripping vise.
3. Insert the ProSoft Insert 1/2" into the butt of the shaft.




4. Holding the ProSoft Insert securely from the bottom, place the forked end of the ProSoft Installation Tool onto the top of the insert just behind the butt end of the shaft. The looped handle of the installation tool should be pointing at the ground with the white plastic tubing positioned as close to the looped handle as possible.

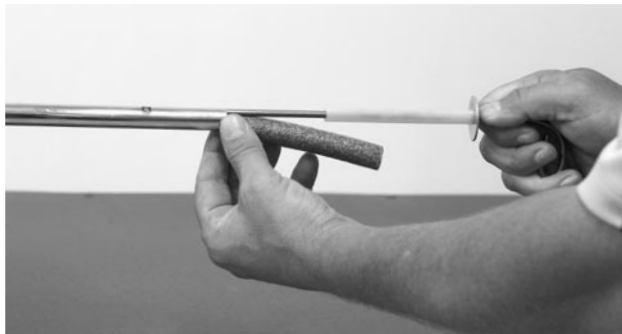


5. While maintaining pressure under the ProSoft Insert, push the insert into the golf shaft until the washer on the installation tool is flush with the butt end of the shaft.

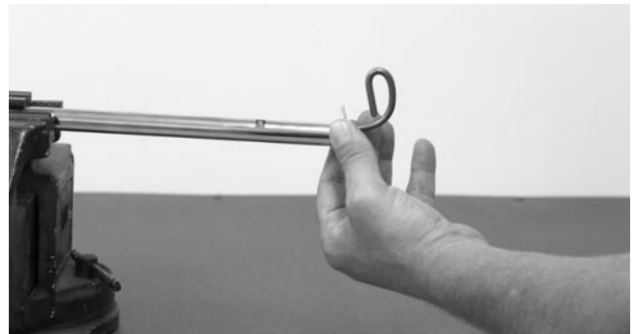

6. While holding the washer flush against the shaft butt, rotate the looped handle 180° so that the looped handle is now facing up, disconnecting the forked tip from the insert.

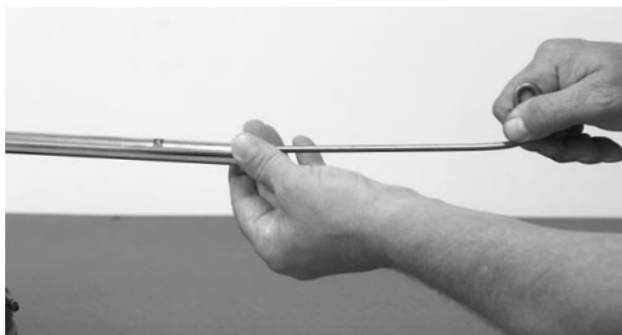

7. Keeping the washer in place, withdraw the tool from the shaft until the plastic white tube reaches the washer and then remove the installation tool.

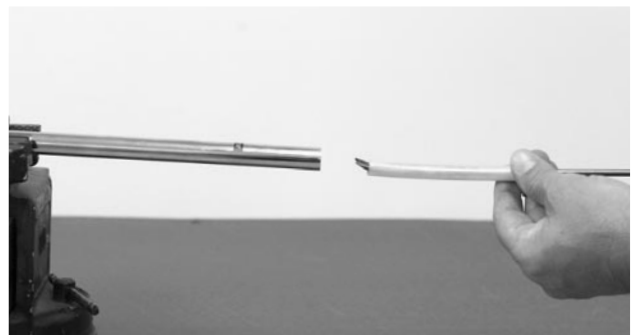

**NOTE:** It is recommended to puncture a small vent hole in the grip tape covering the shaft butt prior to grip installation.