



PLEASE CAREFULLY READ THESE INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION PROCEDURE

WST18: See Steps 1 - 6 • WST10: See Steps 2 - 6

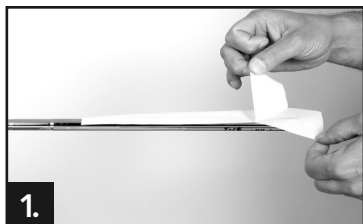

Step 1. Cut a 10 1/2" strip of tape from the roll and apply the white side lengthwise along a clean shaft. Allow one half inch to extend beyond the butt end of the shaft. Note: This tape can be applied over build-up tape, just like the solvent-activated, double-coated tape.

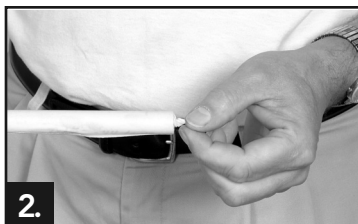

Step 2. Remove the white liner and carefully wrap the tape around the shaft. Twist the end of the tape and push the twist inside the butt end of the shaft. This will prevent water from entering the shaft during the grip installation process.




Step 3. Plug the hole in the grip cap with a tee or cover the hole with your finger, then pour warm water both into the grip and along the surface of the tape. Cover the open end of the grip and shake to thoroughly wet the entire inside. Note: One drop of liquid dish soap can be added to 16 ounces of water to make the grip slide on easier.



Step 4. Pour the water from the grip along the entire length of the water soluble tape to again moisten the tape. Note: Shake the grip briskly to remove any excess water that may be trapped, especially in grips with ribs.



Step 5. It is very important that the entire surface of the tape is wet (be sure that the butt end is also saturated) to facilitate installation. Position the open end of the grip just beneath the shaft butt and quickly slide the grip up and over the shaft until the shaft hits the end cap. Note: The grip should be applied as closely as possible in the correct alignment at this point.

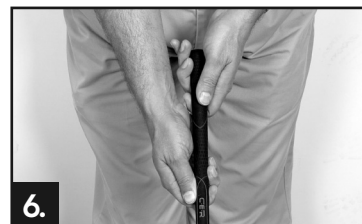

Step 6. Place the club in playing position and quickly make small, final adjustments to the alignment of the grip on the club. A drying time of one hour should be allowed.

IMPORTANT NOTE:

If the grip fails to adhere properly to the shaft after the allotted drying time, there are two likely reasons:

- EITHER:
1. Excess water remained inside the grip.
 2. The grip was moved too much when aligning at the time the club was placed in playing position. Excessive movement at this time will break the forming bond and it will not rebound. This is why it is very important to closely follow the instructions in Step 5.

Note: A grip applied with water soluble tape can be removed by using a syringe or Grip Remover filled with water instead of grip solvent.